

Dual Strength Range

Hip Thrust*
Owners Manual

510H

* Note: This machine does not have a dual function

Important Safety Information



CAUTION

Read these instructions carefully before operating Pulse equipment in conjunction with individual machine instructions.

Seek professional medical advice before using fitness equipment. Heart rate monitoring systems may be inaccurate. Over exercise may result in serious injury or death. If you feel faint, dizzy or exhausted stop exercising immediately.

Ensure equipment is checked regularly for signs of damage and wear. Do not use equipment if faulty or damaged until repaired using only genuine Pulse Fitness parts fitted by an authorised person.



SUPPORTING DOCUMENTATION

Carefully read and comprehend ALL of the safety documents relating to this piece of equipment before using or assembling this equipment. Keep this manual for future reference.

SERIOUS INJURY MAY OCCUR IF THESE PROCEDURES ARE NOT FOLLOWED.

Product Registration

Once the machine has been assembled, find the product SERIAL NUMBER located on the rating plate.

SERIAL NUMBER _____

* Refer to the SERIAL NUMBER and MODEL NAME when calling for service (Located on the front page of this manual).

Questions

If you have any questions or if any parts are damaged or missing, please contact your distributor immediately.

Caution

In order to avoid human injuries and property damages, before the use of this series equipment, please read the following important notices.


1. Before use of the equipment please read this Owner's Manual carefully. The equipment should be assembled and used strictly following the relevant instructions in this manual, and cannot change any of its components or disassemble it freely.
2. It should be ensured that all users have been fully aware of the safety warnings and precautions before they exercise on the equipment.
3. Too loose-fitting clothing cannot be worn, and sports shoes should be put on while exercising.
4. The equipment should be carefully examined before training. If there is damage, please do not use it and do not try to repair it by yourself. Please contact your supplier in time. It is necessary to inform after-sales service personnel as soon as possible to get the machine repaired.
5. Make sure the selector pin has fit well in its position before exercising and do not use selector pin other than the one coupled with this equipment to avoid any injury.(Apply to single station with cable)
6. The equipment should be positioned on a flat, level and clean. There should be a reasonable space around the machine, to not cause injury to others when in use.
7. Before using the machine, please ensure that the cable is in the groove of pulley, and attention should be paid especially to the end of cable. (Apply to single station with cable)
8. Only originally attached or manufacturer provided weight stack can be used in this

equipment and can not increase the weight of weight stack by use of other manufacturers' weight stack plate. (Apply to single station with cable)

9. Children and pets should be kept away from the equipment whilst it is in use.
10. When using the equipment if you feel dizzy or physical pain you should stop exercising intermediately and consult a doctor.

Before using the equipment please consult your physician and fitness expert, and must be sure to read all the specifications in this owner's manual. Manufacturer will not be held responsible for any personal injury and property loss resulted from the incorrect use of the products.

Machine Overview

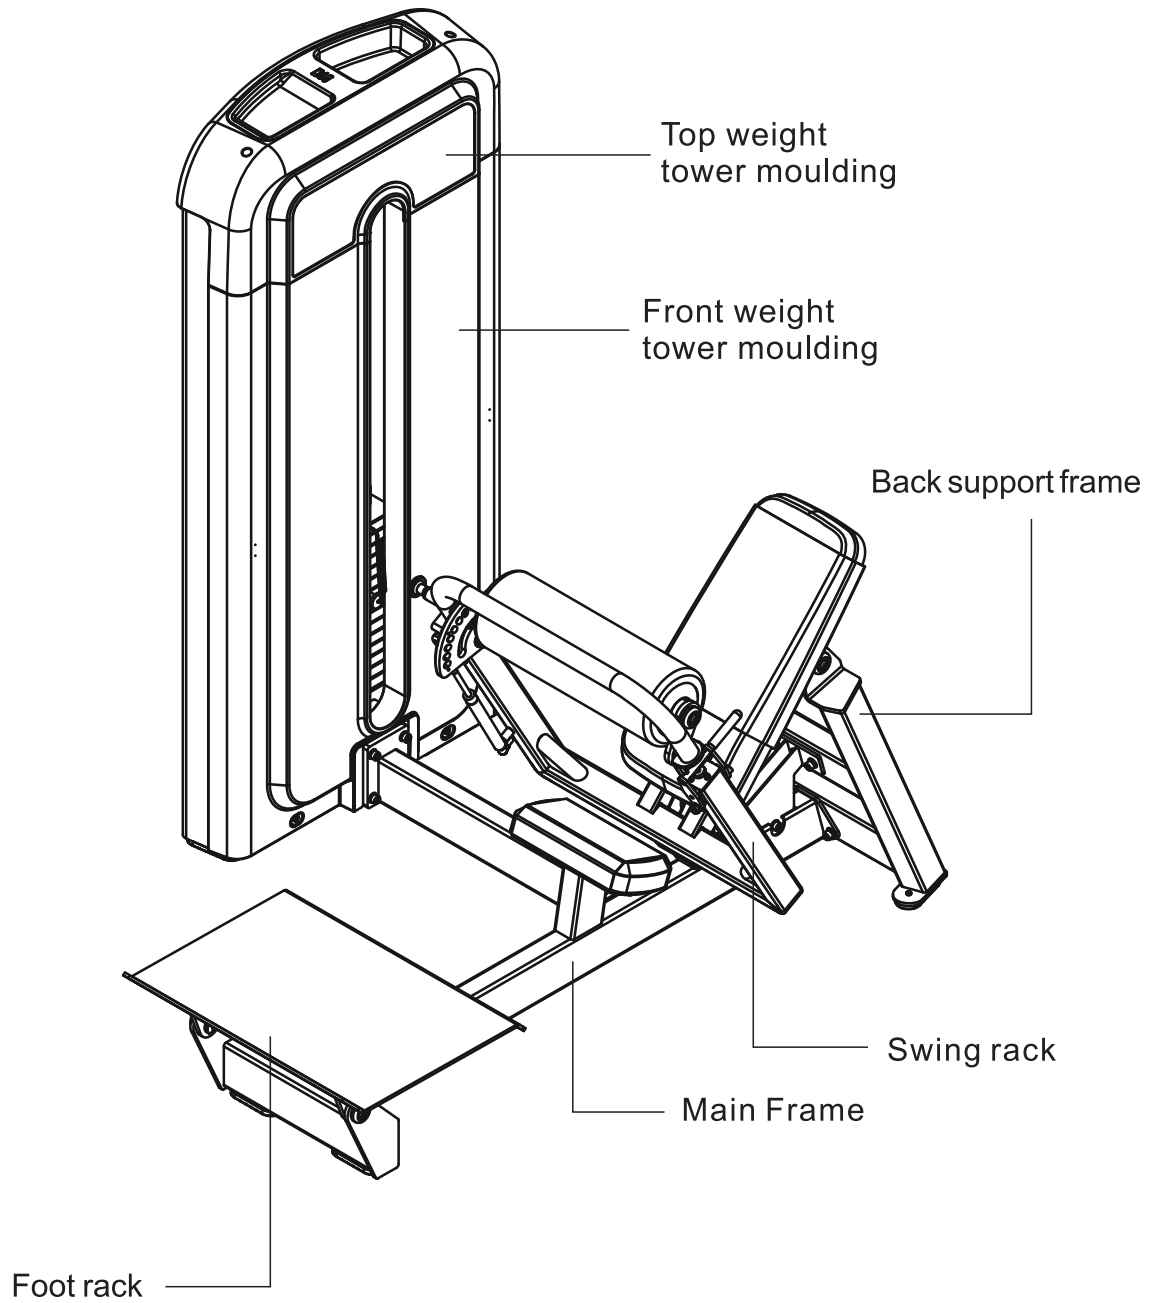

Fitting Instructions


1. Be careful unwrapping the machine and do not use a knife as it could damage the surface of the machine.
2. When moving this equipment, a sufficient number of personnel should be used to prevent the equipment from collision, or to avoid the injuries caused by personnel shortage.
3. Prior to installation of the equipment, make sure that all the parts are complete, no missing hardware.
4. When install the equipment, should have two or more persons working together to ensure the accurate location of parts assembly.
5. When installing the equipment, the instructions must be followed to prevent components being fitted incorrectly or being omitted.
6. Appropriate tools should be used for installation to avoid damaging the equipment or causing injury.
7. If the equipment needs to be moved this should be done after the installation process has been completed. Failure to do so could result in injury.
8. Follow the installation sequence of the fastening locking nuts outlined in this manual. Locking nuts should not be fully tightened until they are all loosely into position across the whole machine and then can be tightened up one by one.
9. Before installation the cable terminals should be checked to make sure whether they are firm. (Apply to single station with cable)

10. After the completion of the installation, test the equipment with a low weight.

Check the movement is smooth and there is no movement in the frame. If this is not the case it may be necessary to check the equipment carefully, identify the problem and re-install.


Assembly step 1

Step	No.	Description	Specifications	Qty
1	45	Round pad swing frame		1
	46	Round pad adjusting rack		1
	47	Round pad support frame		1
	55	Connecting shaft		2
	59	Plastic washer		2
	61	End cover		1
	63	Metallurgy set		2
	92	Socket cap screw	M10*45	1
	97	Hexagon socket screw for umbrella head	M10*25	1
	98	Hexagon socket screw for umbrella head	M10*30	1
	103	Flat washer	F 20*F 10.5*2	1
	105	Big washer	F 30*F 10.5*2.5	1
	108	Spring washer	M10	1
	118	Leg pad		1

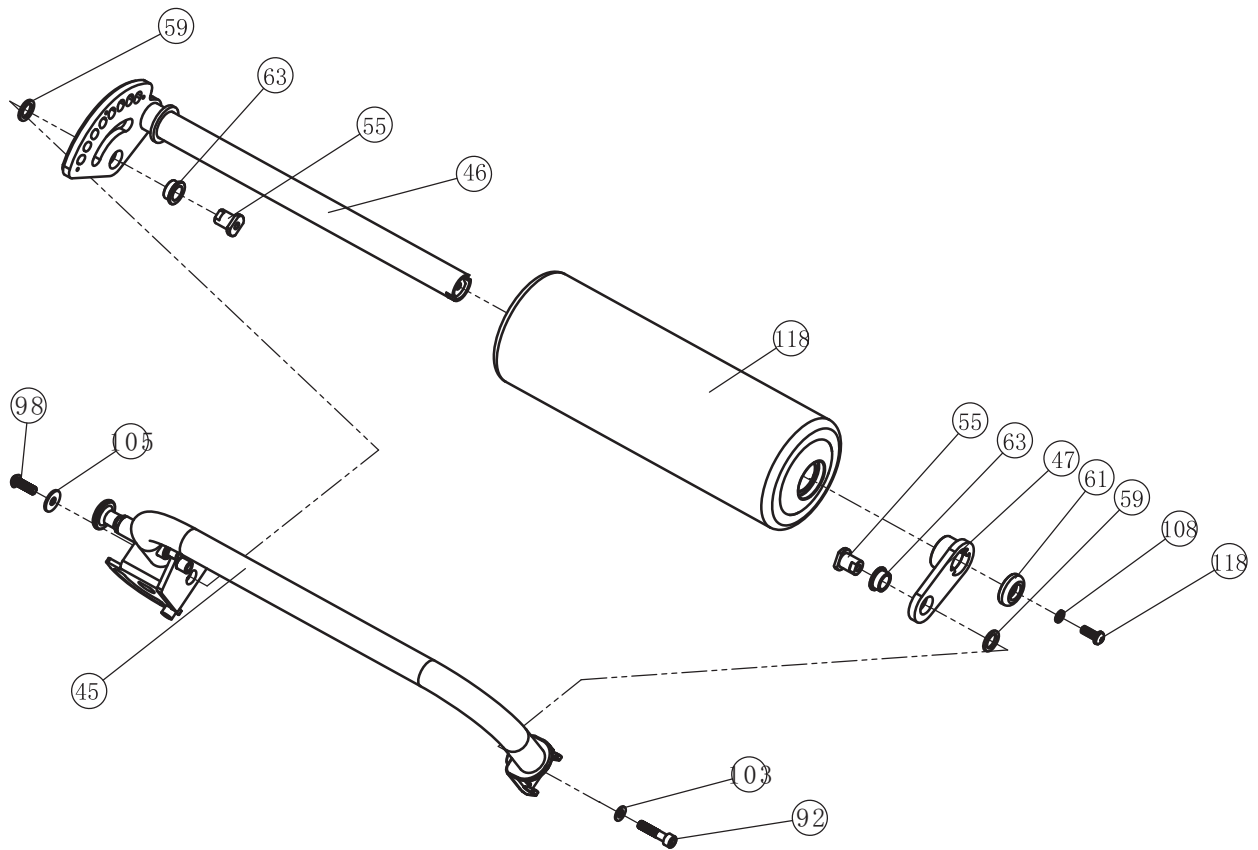


Assembly step 2

Step	No.	Description	Specifications	Qty
2	45	Round pad swing frame		1
	51	Spindle1		1
	61	End cover		2
	72	Gas spring cylinder		1
	97	Hexagon socket screw for umbrella head	M10*25	2
	103	Flat washer	$\Phi 20 * \Phi 10.5 * 2$	2
	108	Spring washer	M10	2

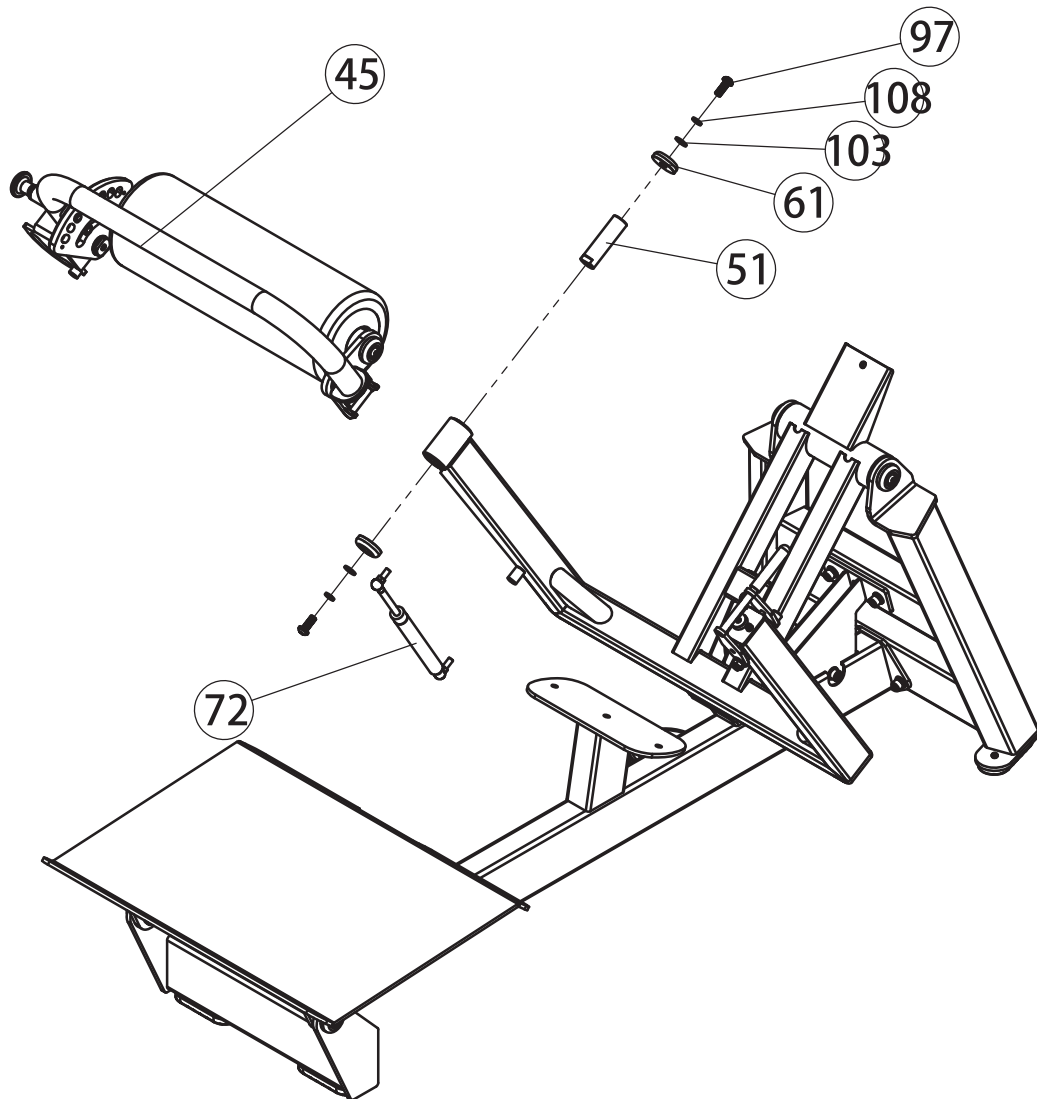


Assembly step 3

Step	No.	Description	Specifications	Qty
3	88	Socket cap screw	M8*30	3
	89	Socket cap screw	M8*70	1
	102	Flat washer	$\Phi 16 * \Phi 8.4 * 1.6$	4
	107	Spring washer	M8	4
	116	Cushion group		1
	117	Cushion group		1

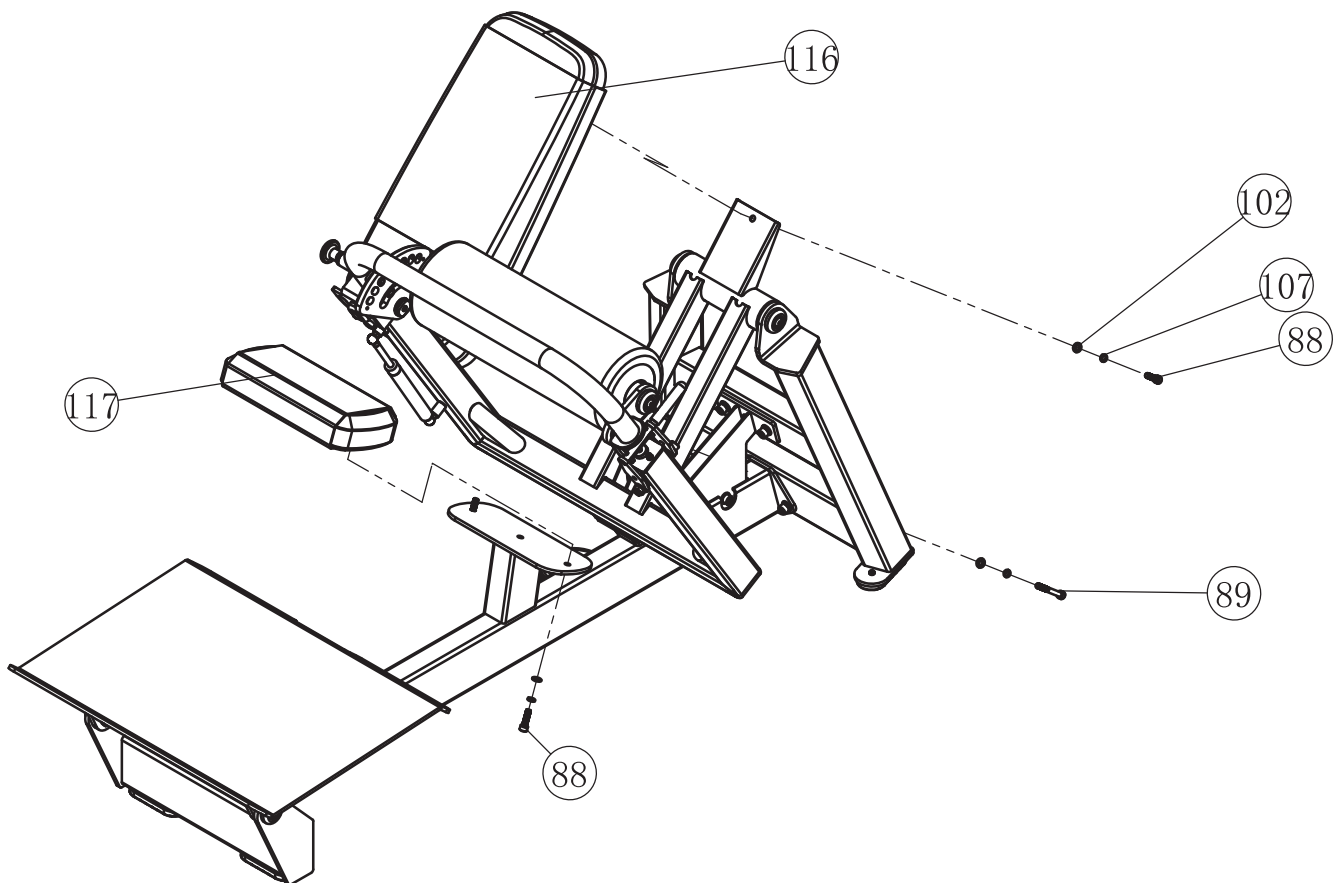



Assembly step 4

Step	No.	Description	Specifications	Qty
4	1	Door frame		1
	19	Hex socket head cap screw	M10*35	8
	23	Spring washer	M10	8
	28	Plain washer	F 20*F 10.5*2	10
	40	connection frame		1
	41	Main frame		1
	73	pulley		1
	93	Socket cap screw	M10*50	3
	110	Nut	M10	1

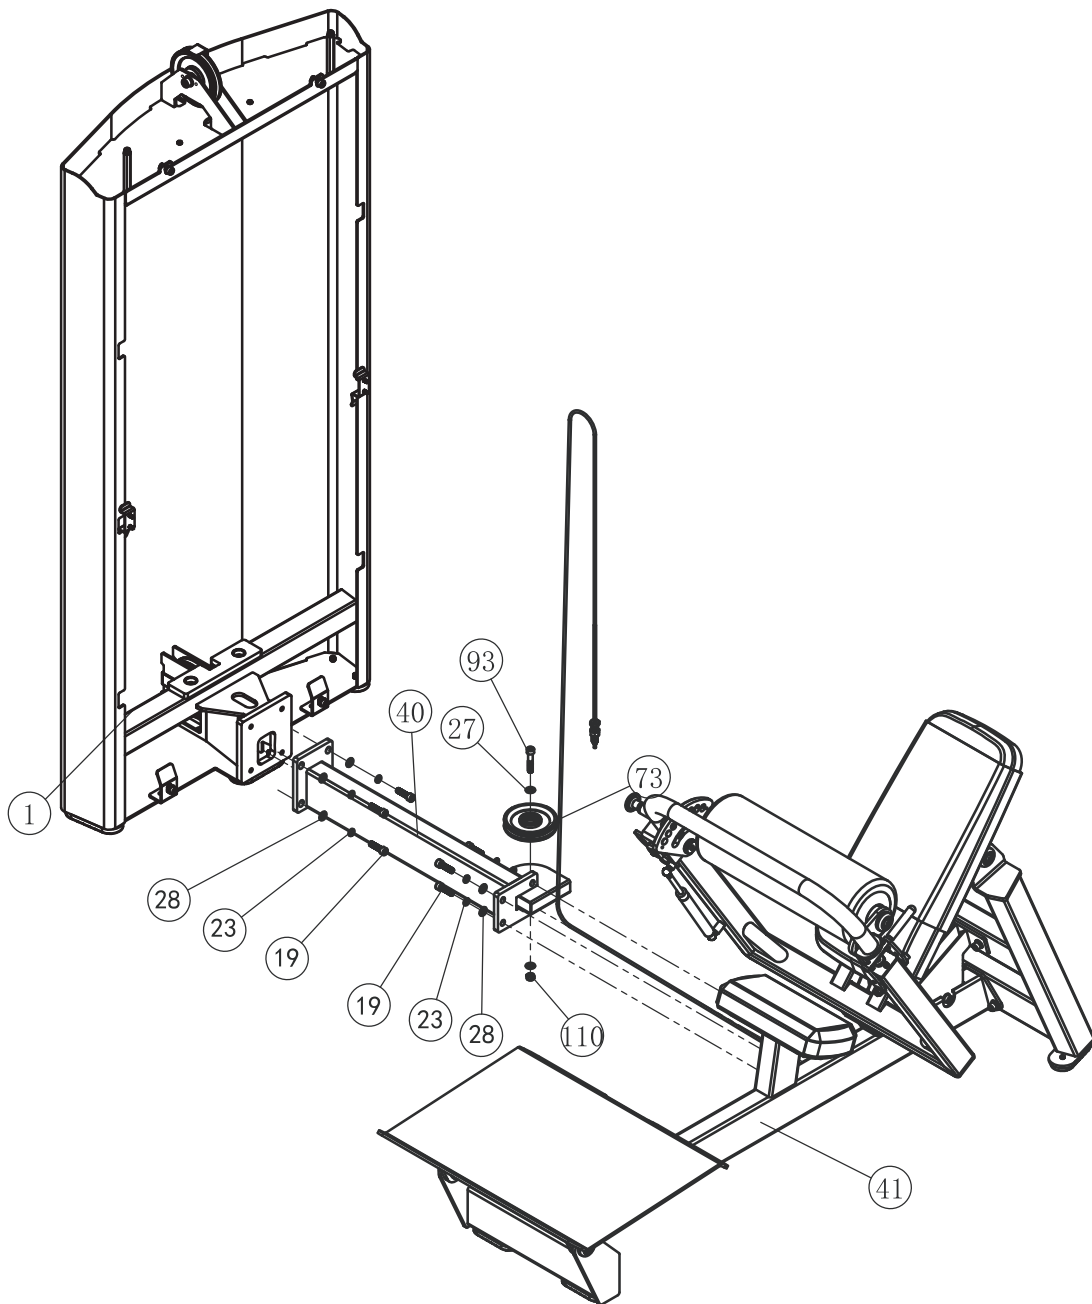


Assembly step 5

Step	No.	Description	Specifications	Qty
5	1	Door frame		1
	8	Upper shield		1
	9	Front shield		1
	16	Hex socket head cap screw	M6*16	2
	17	Hex socket head cap screw	M8*20	4
	26	Plain washer	F12*F6.4*1.6	2
	27	Plain washer	F16*F8.4*1.6	4

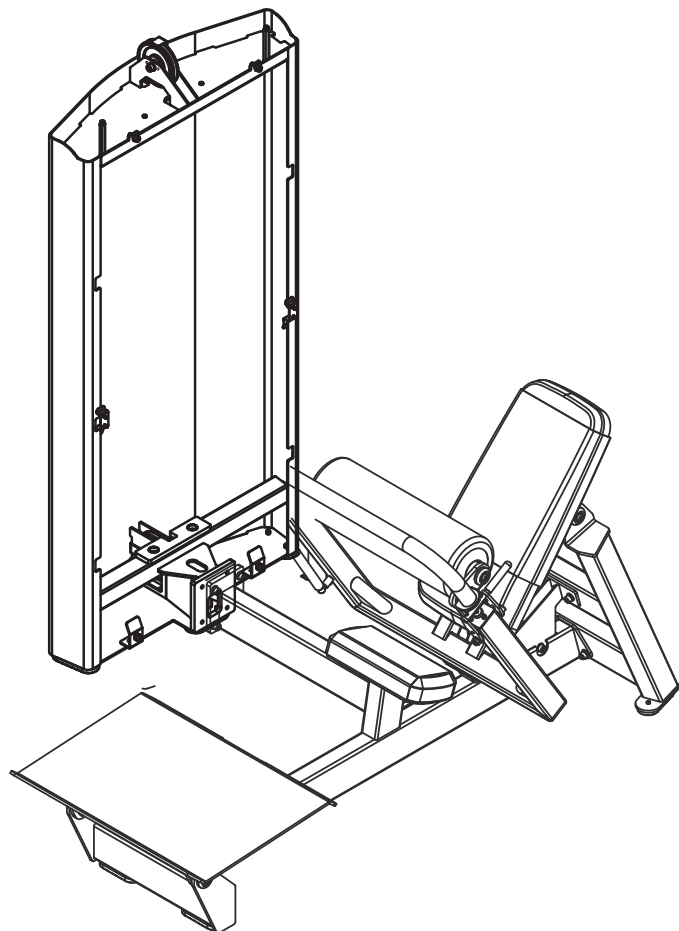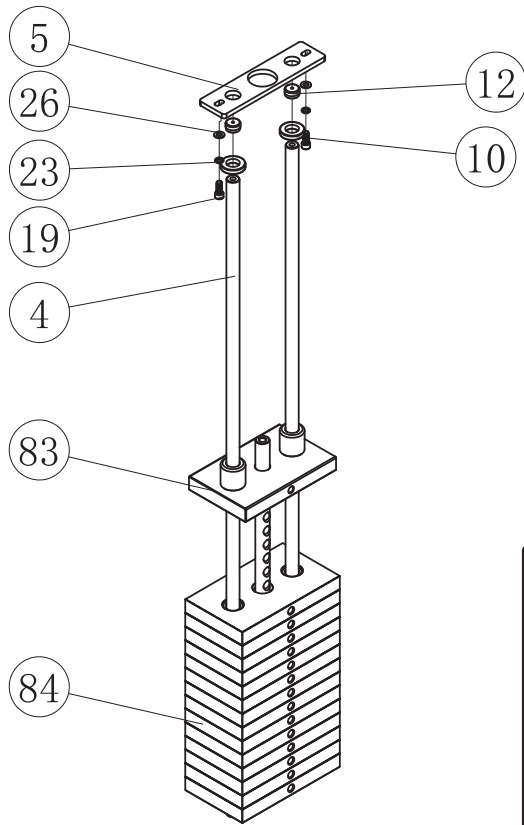


Assembly step 6

Step	No.	Description	Specifications	Qty
6	1	Door frame		1
	8	Upper shield		1
	9	Front shield		1
	16	Hex socket head cap screw	M6*16	4
	17	Hex socket head cap screw	M8*20	2
	26	Plain washer	F 12*F6.4*1.6	4
	27	Plain washer	F 16*F8.4*1.6	2

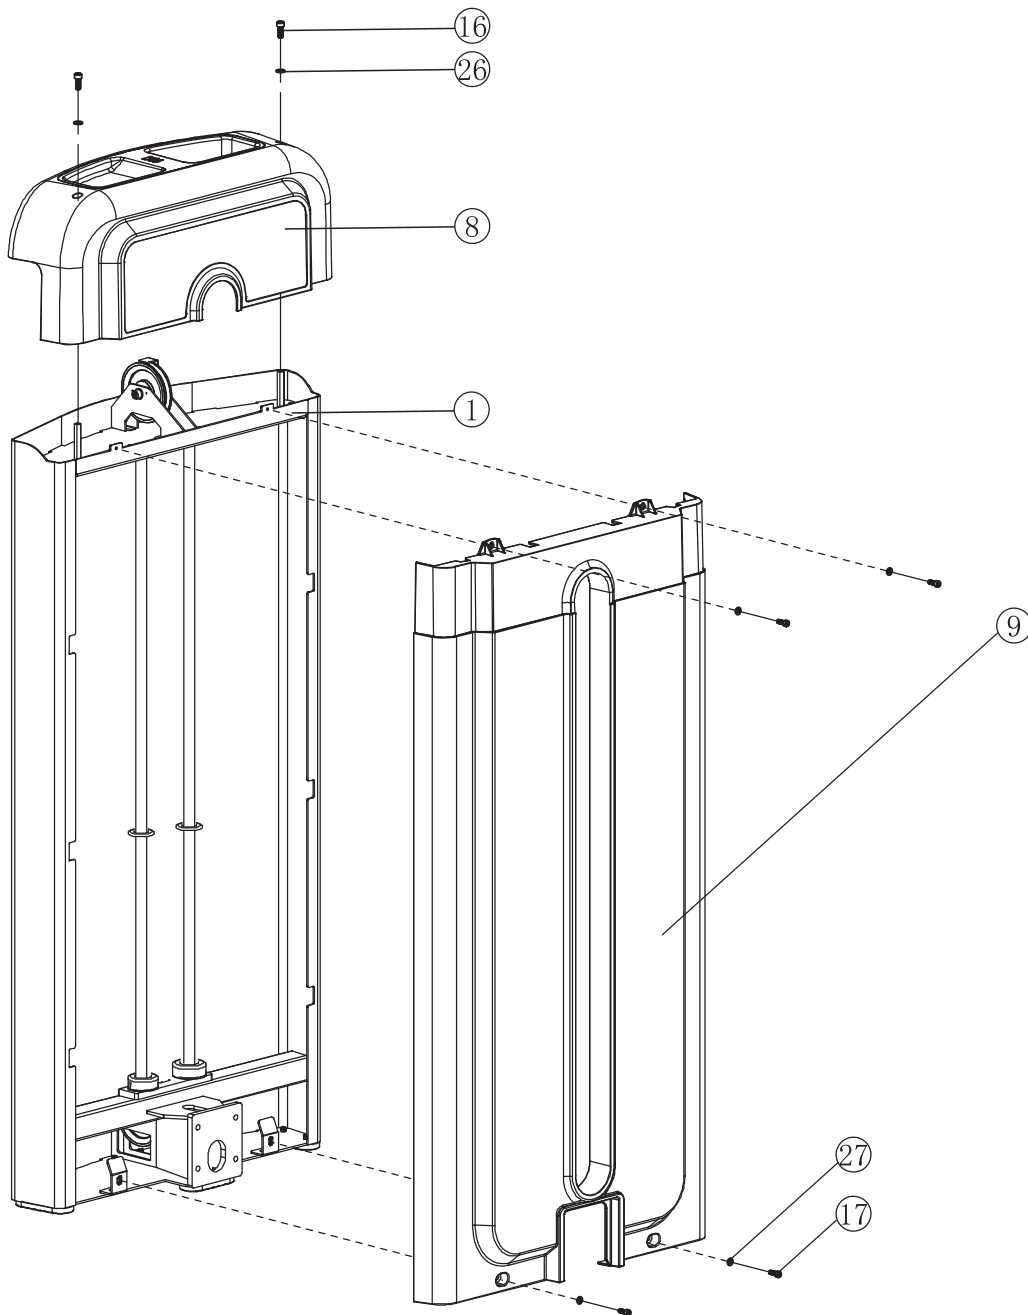


Exploded View

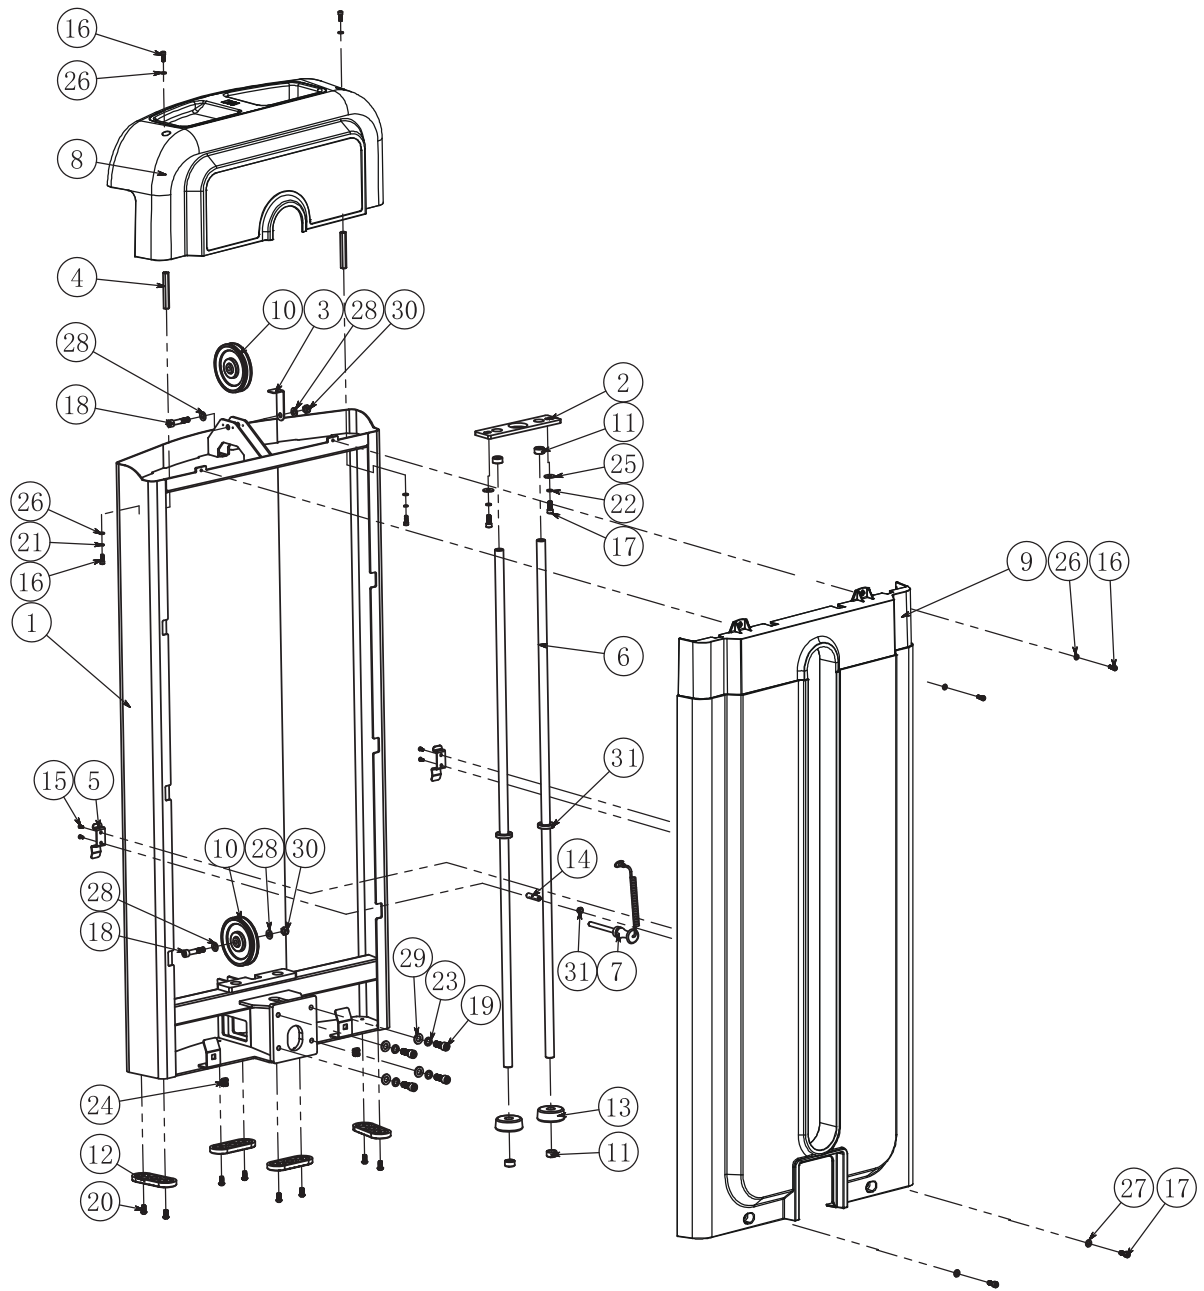

Exploded List

No.	Description	Specifications	Qty
1	Door frame		1
2	Guide rod stator		1
3	Pulley catch		2
4	Shield fixation column		2
5	Shield fixation plate		2
6	Guide rod		2
7	Selector pin		1
8	Upper shield		1
9	Front shield		1
10	Pulley		2
11	Rod end cover		4
12	Rubber mat		4
13	Rubber bumper		2
15	Cross recess pan head self-tapping screw	ST4.2*13	4
16	Hex socket head cap screw	M6*16	4
17	Hex socket head cap screw	M8*20	6
18	Hex socket head cap screw	M10*50	2
19	Hex socket head cap screw	M10*35	4
20	Hexagon socket button head screw	M8*16	8
21	Spring washer	M6	2
22	Spring washer	M8	2
23	Spring washer	M10	4
24	Cage nut	M8	2
25	Big washer	Φ24*Φ8.4*2	2
26	Plain washer	Φ12*Φ6.4*1.6	4
27	Plain washer	Φ16*Φ8.4*1.6	4
28	Plain washer	Φ20*Φ10.5*2	8
29	Nylon insert lock nut	M10	2
31	Rubber bumper		2
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			

Exploded View

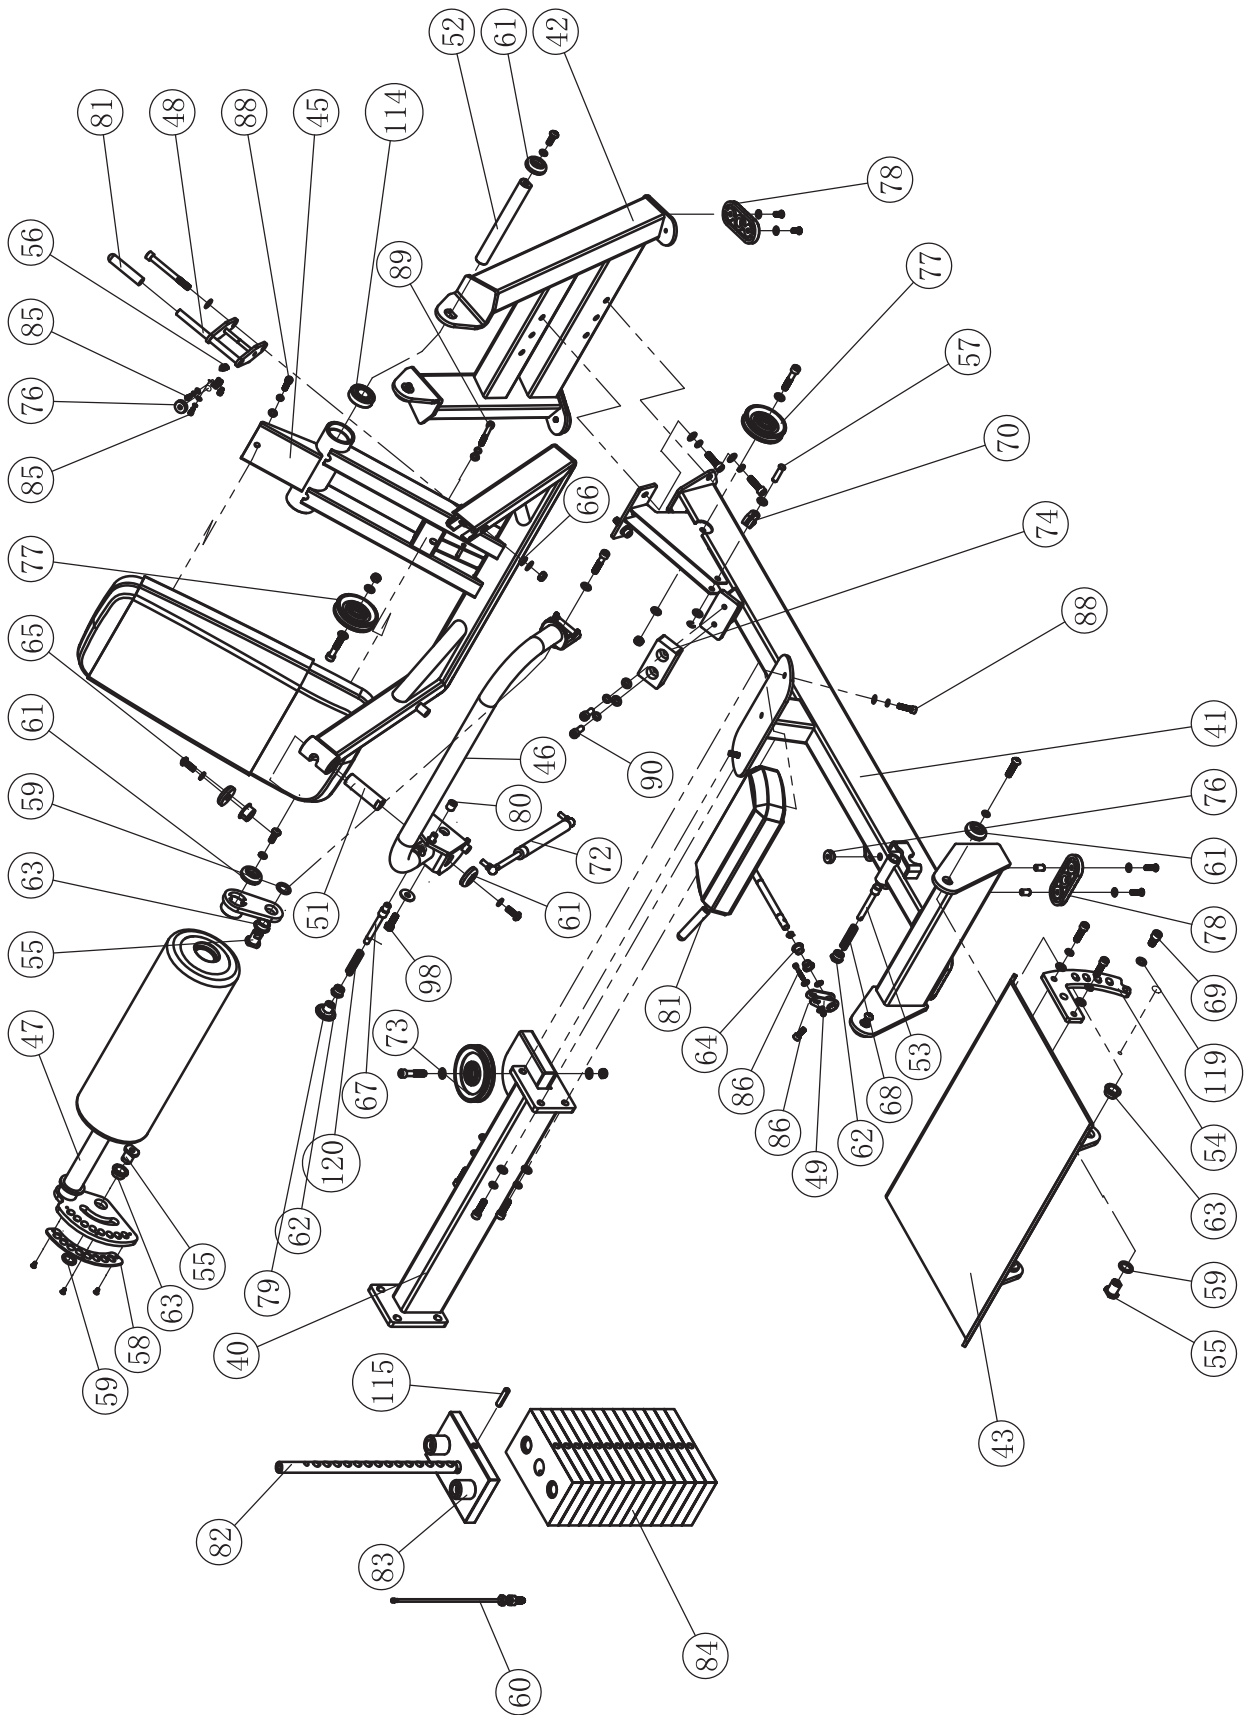

Exploded List

No.	Description	Specifications	Qty
40	connection frame		1
41	Main frame		1
42	Back support frame		1
43	Foot rack		1
44	Swing rack		1
45	Round pad swing frame		1
46	Round pad adjusting rack		1
47	Round pad support frame		1
48	Supporting frame		1
49	Connecting frame		1
50	Sping support		1
51	Spindle1		1
52	Spindle2		1
53	Adjusting column		1
54	Adjusting plate		1
55	Connecting shaft		4
56	Tension spring		1
57	Flat pin		1
58	Adjusting patch		1
59	Plastic washer		4
60	cable		1
61	End cover		7
62	M20 nut		2
63	Metallurgy set		4
64	Copper bush		2
65	Self-lubricating bearing		2
66	Self-lubricating bearing		2
67	Adjusting column		1
68	Spring		2
69	Socket cap screw	M12*20	1
70	cable U-shackle		1
71	Gas spring cylinder		1
72	Gas spring cylinder		1
73	pulley		1
74	Cushion		1
76	Cushion		2
77	pulley		2
78	Ground stick pad		4
79	Knob		1
80	Stop collar		1
81	Small handle gloves		2

Exploded List

No.	Description	Specifications	Qty
82	15 hole selection axis		1
83	10lb top weight assembly		1
84	10lb weight stack assembly		14
85	Socket cap screw	M5*10	3
86	Socket cap screw	M5*35	1
87	Socket cap screw	M8*20	1
88	Socket cap screw	M8*30	3
89	Socket cap screw	M8*70	1
90	Socket cap screw	M10*25	2
91	Socket cap screw	M10*35	10
92	Socket cap screw	M10*45	1
93	Socket cap screw	M10*50	3
94	Socket cap screw	M10*100	1
95	Hexagon socket screw for umbrella head	M8*16	4
96	Hexagon socket screw for umbrella head	M8*25	4
97	Hexagon socket screw for umbrella head	M10*25	5
98	Hexagon head bolts	M10*30	1
99	Hexagon socket screw for umbrella head	M10*40	2
100	Cross recessed countersunk head screw	M5*10	3
101	Flat washer	F 10*F5.3*1	3
102	Flat washer	F 16*F8.4*1.6	12
103	Flat washer	F 20*F 10.5*2	23
104	Big washer	F 15*F5.3*1.2	2
105	Big washer	F 30*F 10.5*2.5	1
106	Spring washer	M5	3
107	Spring washer	M8	4
108	Spring washer	M10	19
109	Nut	M5	1
110	Nut	M10	4
111	split washer	d=8	1
112	Circlip for shaft	d0=12	2
113	Rivet nut with small countersunk head	M8*18	4
114	Step rolling bearing	f 52*f 25*18	2
115	elastic cylindrical pin	f 10*45	1
116	Cushion group		1
117	Cushion group		1
118	Leg pad		1
119	Sping washer	M12	1
120	Sping		1
121			
122			
123			

Maintenance Schedule

ROUTINE	COMMERCIAL / LIGHT COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY												
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY													
Clean; Upholstery	DAILY	WEEKLY													
Inspect; Cables or Belts and their tension	DAILY	WEEKLY													
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS													
Inspect; All Decals	WEEKLY	3 MONTHS													
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS													
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS													
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS													
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS													
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY													
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY													
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS													

Your equipment comes with a commercial maintenance decal.
For personal, in home use, please follow the home maintenance schedule listed above.

Clean Frame with Silicon based Polish and a Lint Free Cloth . Do not use water based solutions.
Clean Upholstery and Grips with Soapy Water.

Never use ammonia, acid-based, or petroleum-based solvents on
any portion of the machine as it may damage the finish.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying . Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or worn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

- *Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- *These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Pulse uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

*Wipe down adjusting tubes with a dust free rag before applying lubricant.

*Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (litium,super lube,etc.)into the inside of the bearing.using your finger,press the grease into the ball-bearings and their tracks .repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.



WARNING



Failure to carry out maintenance on the equipment in this manual could result in serious injury and void your warranty.

Please ensure all publications supplied with Pulse Fitness equipment are read and understood.

Replacement of defected components should be carried out IMMEDIATELY and/or keep the defective equipment out of use until repaired.

The safety level of the equipment can be maintained ONLY if it is examined regularly for damage and wear,e.g.ropes , pulleys,connection points.
Pay special attention to components which are susceptible to wear.

Ensure all equipment is installed on a stable base and properly levelled before use.

PLEASE KEEP THIS FOR YOUR RECORDS



Pulse Fitness Radnor Park Greenfield Road Congleton Cheshire CW12 4TW

T: +44 (0)1260 294600 E: info@pulsefitness.com www.pulsefitness.com

All information, descriptions and illustrations are given solely as a guide. Actual product specifications may differ due to manufacturing requirements.

Pulse Fitness reserve the right to make changes to its products and services, where it considers necessary.

Copyright 2023 Pulse Fitness. All rights reserved. Pulse Fitness is part of the Pulse Global company.